


KPX-7V3 EXTENDED PROGRAMMING INSTRUCTIONS

FACTORY RESET

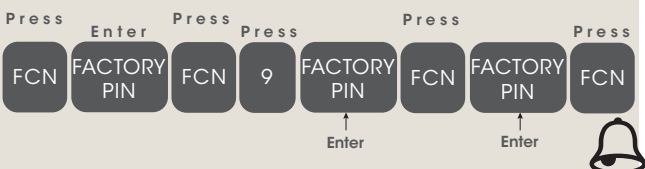


The FACTORY PIN is now the only access to Keypad. The Keypad will still be CODE SET to the devices that were coded to Keypad.



NOTE: If the Keypad is to be deleted from a device's memory, refer to the device's manual to delete a CODE SET remote control.

CREATE YOUR OWN PIN

If a factory reset has been completed, follow below to create your own pin.

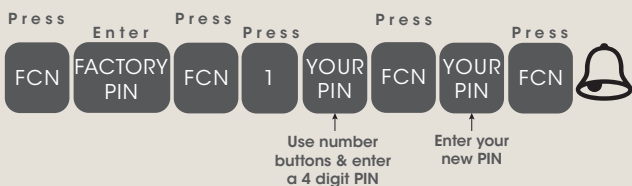


This PIN will now operate the keypad instead of FACTORY PIN. Keep the FACTORY PIN in safe place as this is required to FACTORY RESET the keypad.

PIN FOR A RESTRICTED ACCESS USER



NOTE: These instructions allow a user to only have access to specific transmit buttons (1 - 8). For example, a gardner has access to gate and shed but not garage

STEP ONE

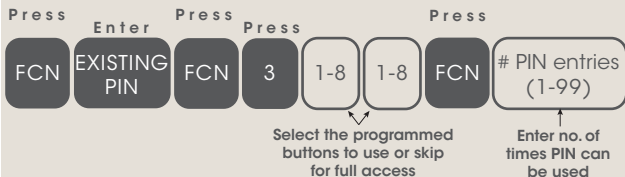

Three long beeps after pressing button 3, indicates memory is full.

STEP TWO




The new PIN can be used to operate the keypad using the selected programmed buttons for the selected number of entries

CODE SET BUTTONS (9 OR 0)

The Keypad has two free access (no PIN required) transmit buttons. These are suitable for a LIGHT or a DOOR BELL.

ACTIVATE: The CODE SET mode on the garage door opener or other remote control device

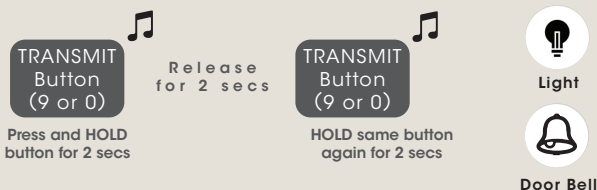

The selected button can now be used by the Keypad.