
MODELS E940C & E950C


For use with Chamberlain multi-frequency Garage Door Openers. The code between the remote control and the receiver changes with each use, randomly accessing over a billion new codes. Refer to your product manual for the location of the learn button.

NOTE: Your product may look different than the products illustrated in this manual.

Single Button Remote Control Model E940C



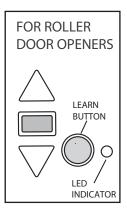

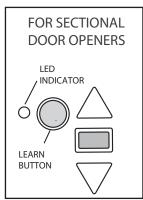



WARNING


To prevent possible SERIOUS INJURY or DEATH from a moving garage door.


- · ALWAYS keep remote controls out of reach of children. NEVER permit children to operate or play with remote controls.
- · Activate the garage door ONLY when it can be seen clearly, is properly adjusted, and there are no obstructions to affect door travel.
- · ALWAYS keep the garage door in sight until it is completey closed. NEVER permit anyone to cross the path of a moving garage door.

PROGRAMMING THE REMOTE USING THE GARAGE DOOR OPENER

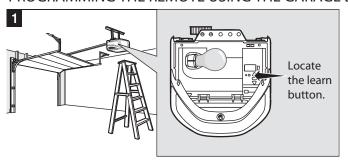

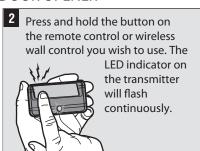


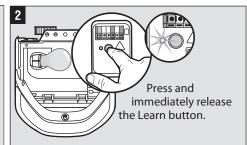

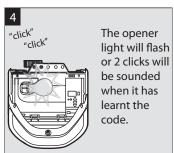

ERASING ALL CODES FROM MEMORY

When deactivating any unwanted remote control code, all previous codes will be erased.

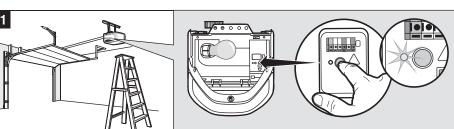


Press and hold the Learn button on the garage door opener until the learn LED goes out (approximately 6 seconds). All previous codes are now erased. Reprogram each remote control you wish to use.

THE REMOTE CONTROL BATTERY

The lithium battery should operate for up to 5 years. If the battery is low, the LED on the remote control will not flash when the button is pressed. To replace the battery:

Pry open the case first in the middle (1), then at each side (2 and 3) with the visor clip.

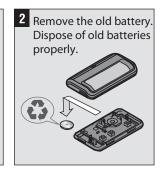





A WARNING

To prevent possible SERIOUS INJURY or DEATH:

- NEVER allow small children near batteries.
- If a battery is swallowed, immediately notify a Doctor.

To reduce the risk of fire, explosion or chemical burn

- Replace ONLY with CR2032 batteries.
- DO NOT recharge, disassemble, heat above 100°C or incinerate.










HOW TO USE THE REMOTE CONTROL

Press and hold the button down until the door or gate starts to move. The remote control will operate from up to 3 car lengths away on typical installations. Installations and conditions vary.

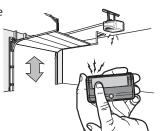

Customer Service:

Australia : PH - 1800 665 438 Website - www.chamberlaindiy.com.au New Zealand : PH - 0800 653 667 Website - www.chamberlaindiy.co.nz

ONE YEAR LIMITED WARRANTY

Chamberlain Australia Pty Limited / Chamberlain New Zealand (Chamberlain), the manufacturer of Chamberlain® automatic garage door openers, warrants to the original consumer purchaser of this product that it is free from defect in materials and/or workmanship for a period of 1 year from the date of purchase.

Chamberlain is committed to manufacturing and supplying high quality goods. As part of this commitment, we seek to provide reliable service and support for our goods and are pleased to provide you, the original purchaser, with this Chamberlain Limited Warranty.

The benefits given to you under this Chamberlain Limited Warranty are in addition to any rights and remedies that you may have under Australian or New Zealand consumer protection laws. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or New Zealand Consumer Guarantees Act 1993. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.